


SeaGateFilters, Inc.

6219 Gum Street Alexandria, VA 22310 703-627-7504

BACKWASH INSTRUCTIONS

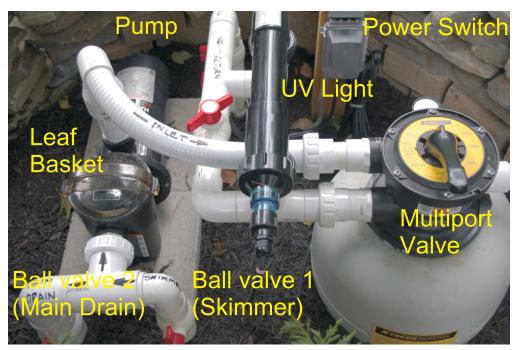

STEP 1: CLEAN PUMP LEAF BASKET

- Turn pump off, switch lever down position
- Close ball valve 1 (skimmer) and 2 (main drain)
- Open pump leaf basket lid (twist counter-clockwise, and pull upward)
- Discard leaves and debris from basket, use water jet to spray off dirt
- Put the leaf basket back, and close the lid (turn clockwise)
- Turn pump on, switch lever up position
- Slowly open ball valve 1 (skimmer) till all air bubbles disappeared, then slowly open ball valve 2 (main drain) till all air bubble disappeared.

STEP 2: CLEAN XTREME BIOFILTER

- While pump is running (since operating pressure of the filter is less than 10 psi, viewed thru the pressure gauge on the multiport valve, turning off the pump every time changing the multiport valve position is not necessary). Turn handle on top of the multiport valve to Backwash position, count to 30 (30 seconds)
- Turn handle to Rinse position, count to 30 (30 seconds), then turn handle to Backwash position. Repeat these steps till the water viewed through the sight glass is clear.
- Last Rinse position, count to 40 (40 seconds), when the water viewed through the sight glass is clear. Then turn the handle to FILTER position for normal filtering operation. You have completed the cleaning (backwash) of the Xtreme BioFilter.